


# Patio Room Divider

## Section Identification Guide

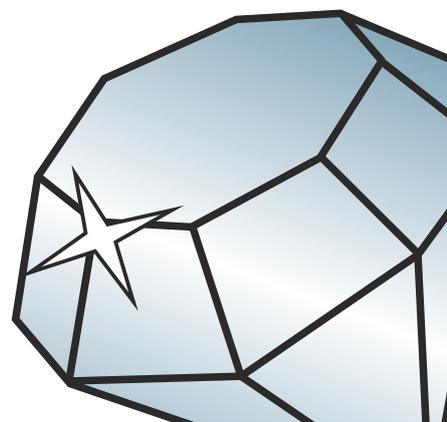

DURATION  
WINDOWS



# Contents



## **Profiles**


Outer Frame & Low Threshold	3
Sash & Interlocks	4

## **Section Drawings**


Three Track Head & Low Threshold	5
Three Track Jamb	6
Interlock & Meeting Stile	7
Outer Frame Assembly	8

# Outer Frames & Low Threshold


## SL310 - Outer Frame

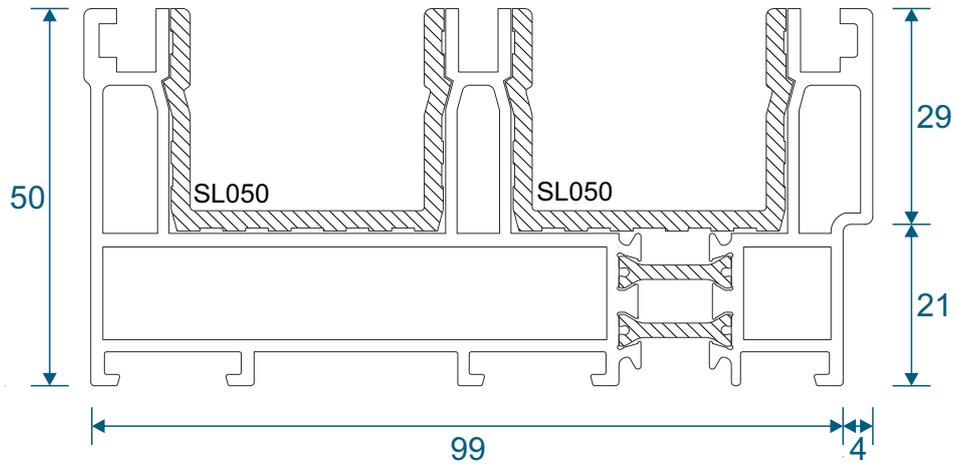

## SL050 - PVC Cover Trim

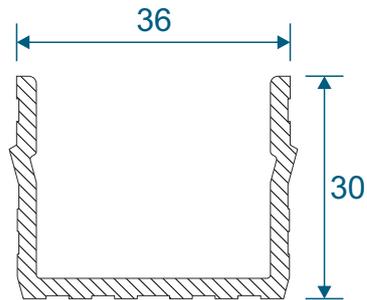


## SWL1190 - Low Threshold

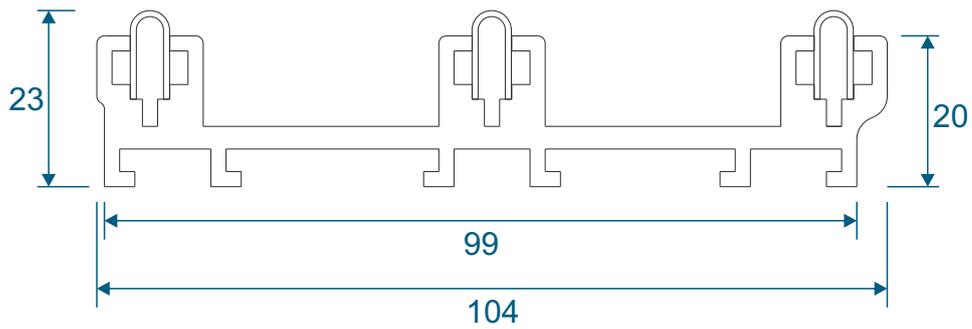


# Sashes & Interlocks


SL021 - Sash Bottom / Top Rail

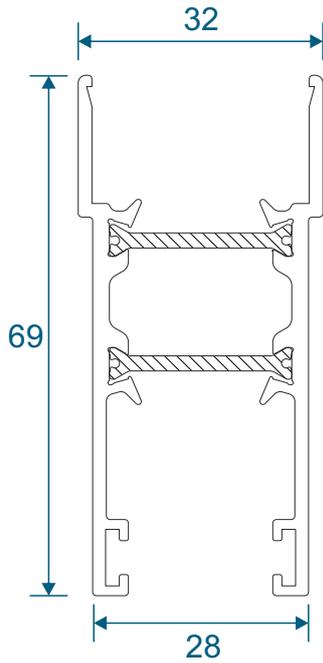



SL020 - Sash Jamb

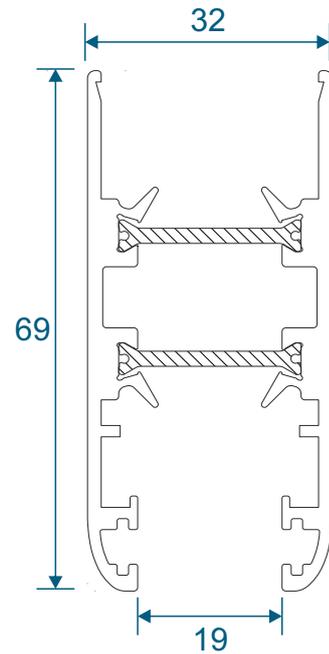

SL030 / SL051 - Interlock

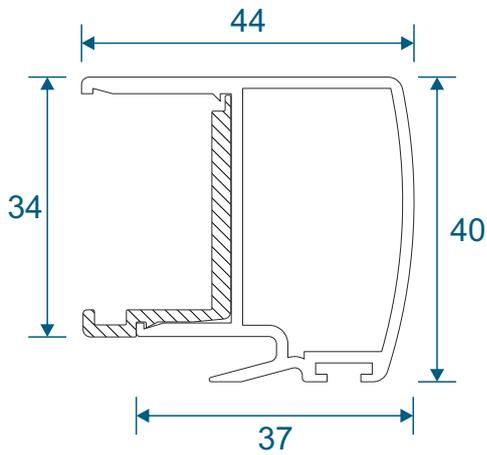


SL140 - Meeting Stile

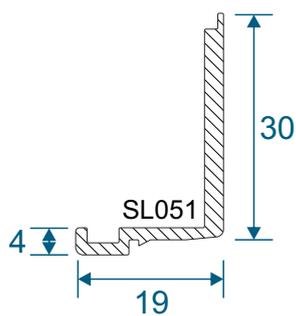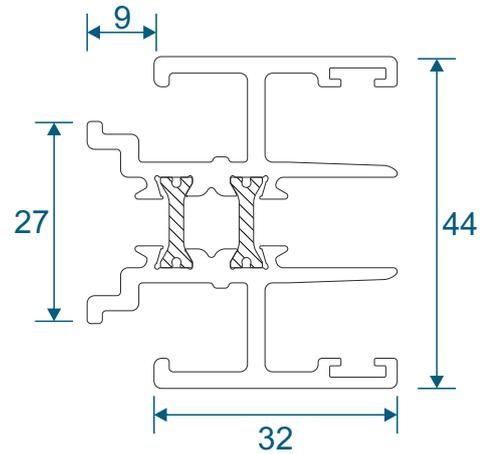


# Three Track

## Head & Low Threshold

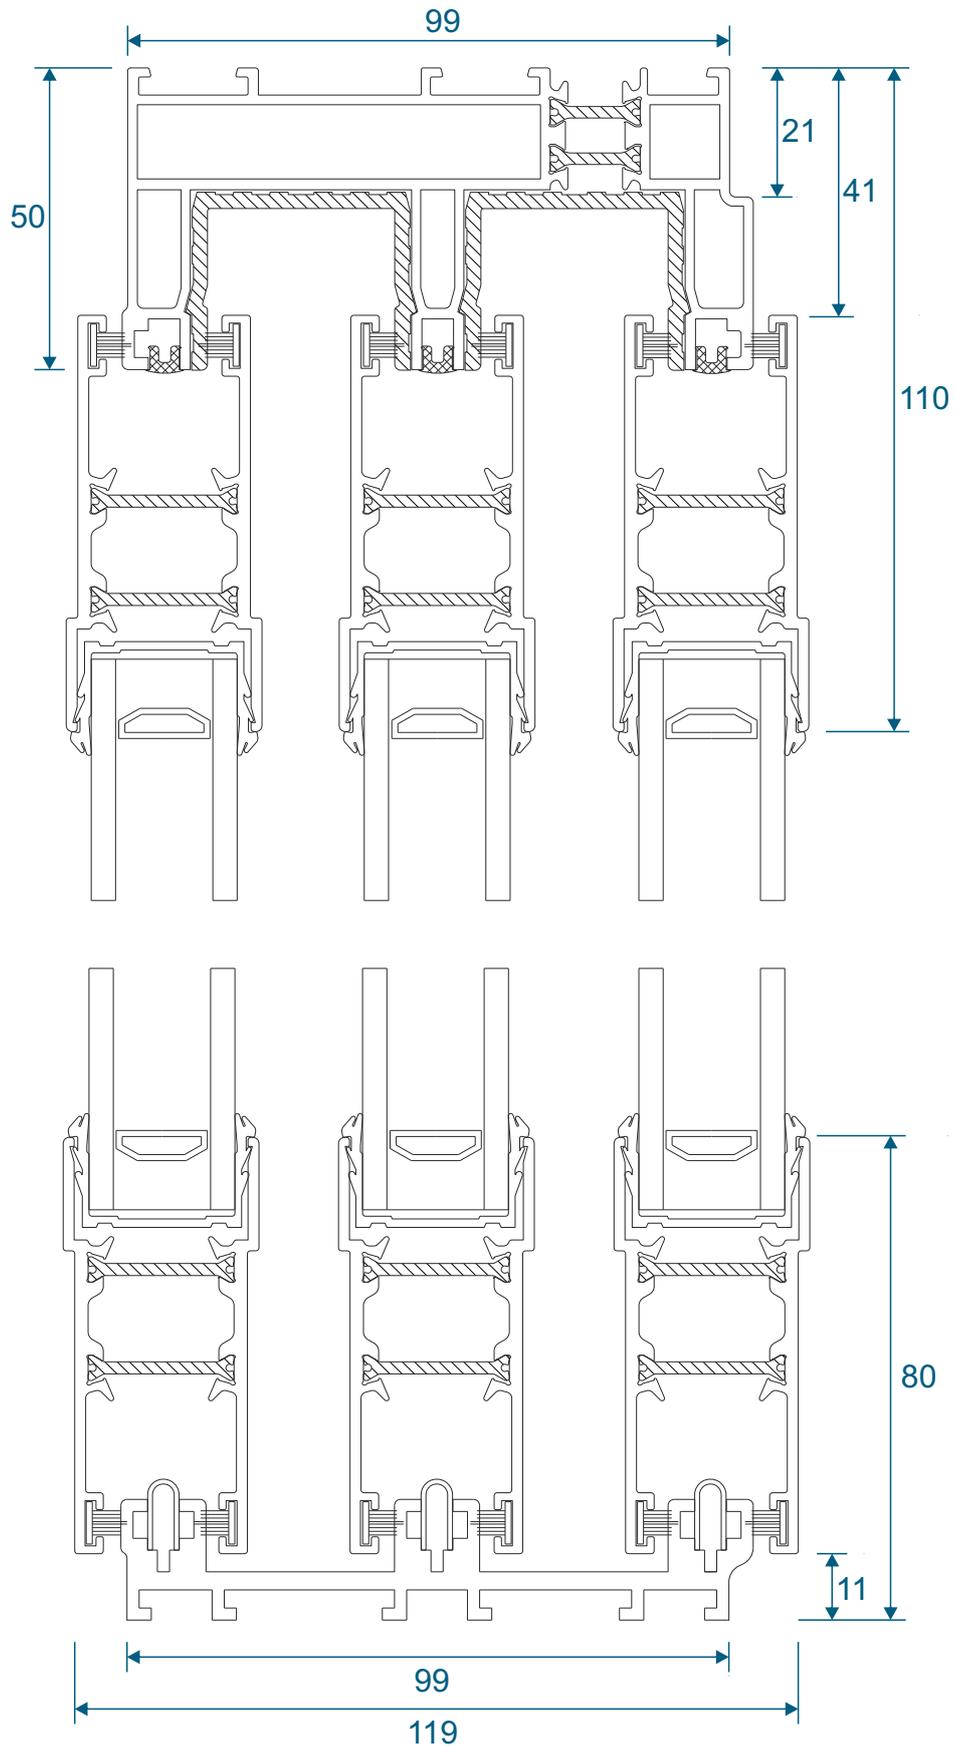


# Three Track

## Jamb

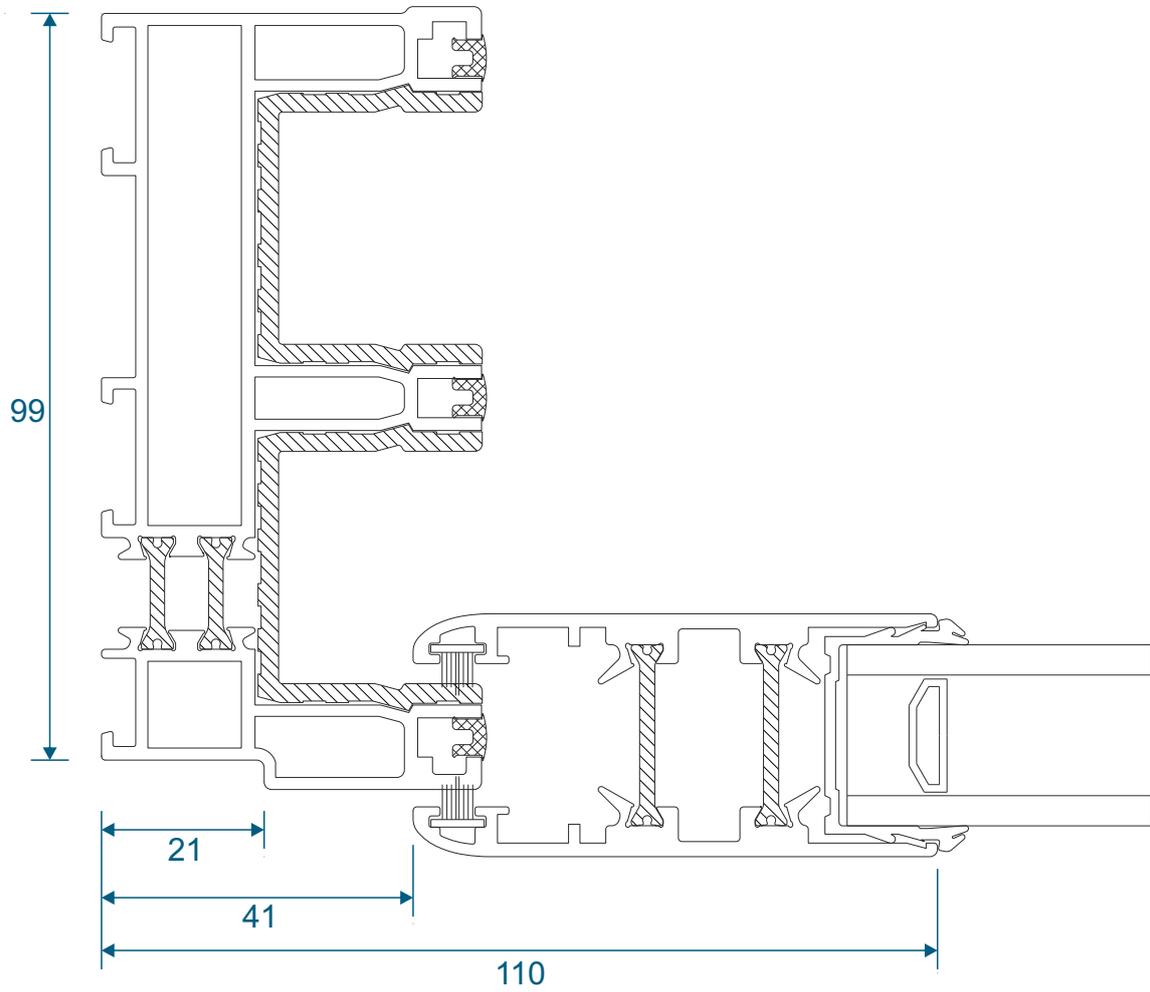


# Interlock & Meeting Stile



## Standard Interlock

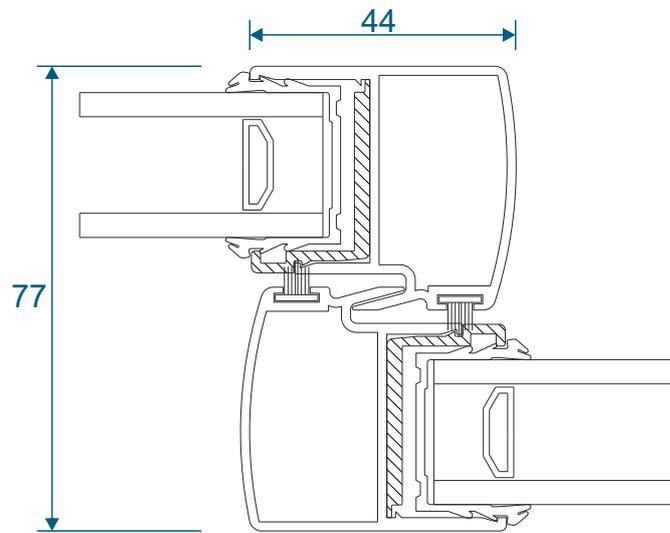


## For 4 & 6 Panel Doors

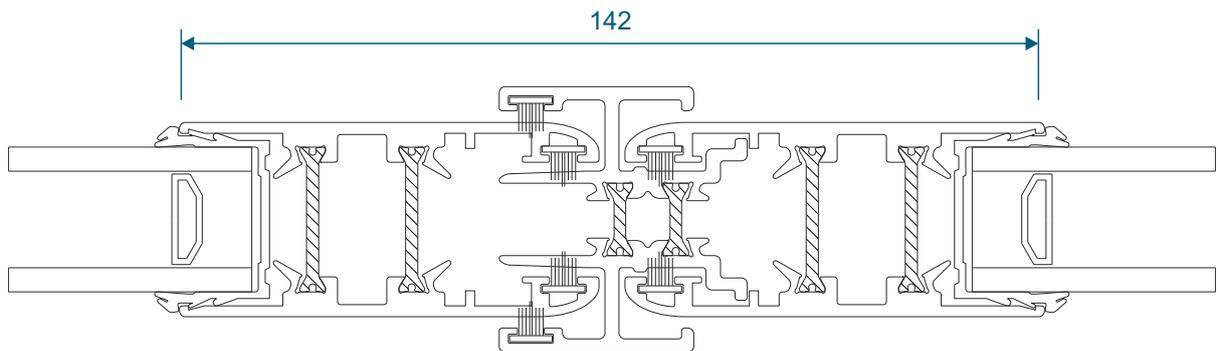

# Outer Frame Assembly

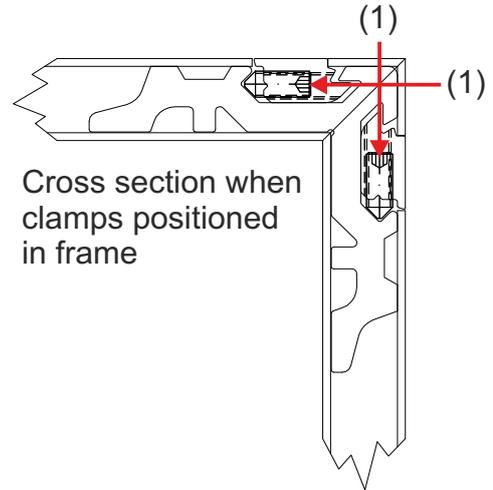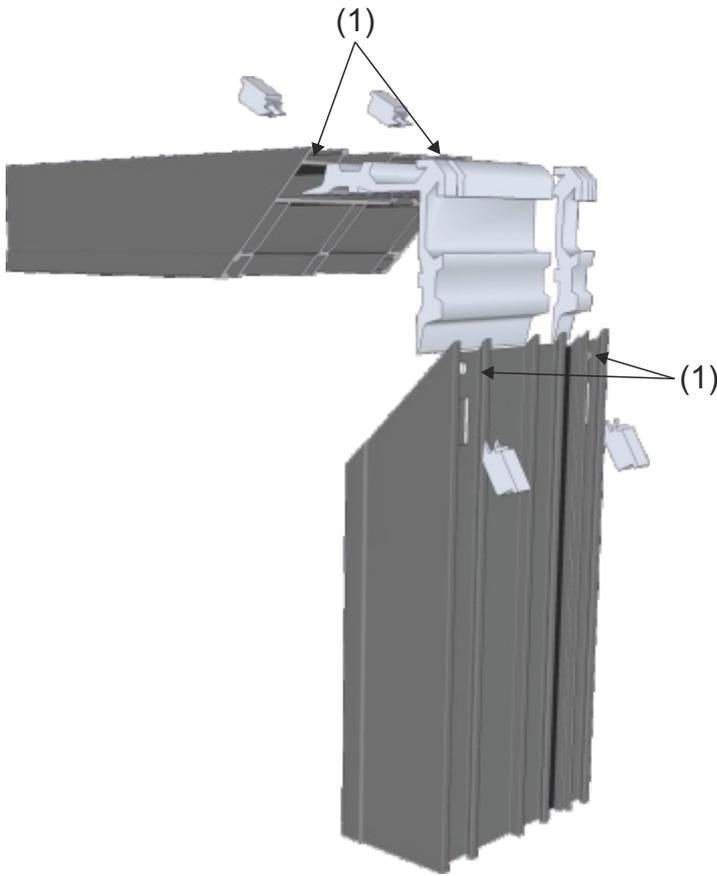

- Insert cleats into desired position.
- Insert blocks, these are then tightened using an allen key inserted through the small hole above the block opening (1). This will bring the two frame sections together.
- Remember to always seal any joins.
- Repeat this until both corners are assembled and sealed.
- Screw block to threshold.
- Place square cut jamb (2) over block (3) and screw into position (4).
- Remember to always seal any joins.
- Repeat this until both jambs are assembled and sealed to the threshold.

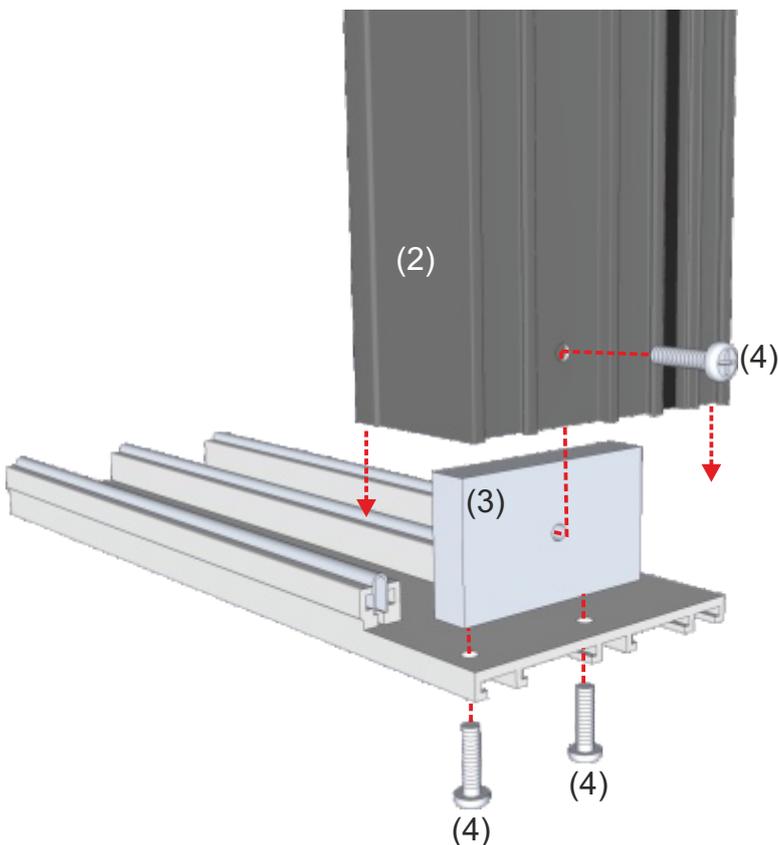

### **Main Office & Factory**

Units 4-5,                    t: 01268 681612 (15 lines)  
Charfleets Road,        f: 01268 510058  
Canvey Island,         e: [sales@duration.co.uk](mailto:sales@duration.co.uk)  
Essex. SS8 0PQ        w: [www.duration.co.uk](http://www.duration.co.uk)

### **Grand Design Exhibition Centre**

Unit 1 Casino Parade,    t: 01268 695100  
Eastern Esplanade,  
Canvey Island,         SatNav Directions  
Essex. SS8 7FJ         Use: SS8 7DN.