


Secondary Glazing





**DURATION
WINDOWS**

Inserting Panels On A 3 Panel Horizontal Slider (All Panels Moving)

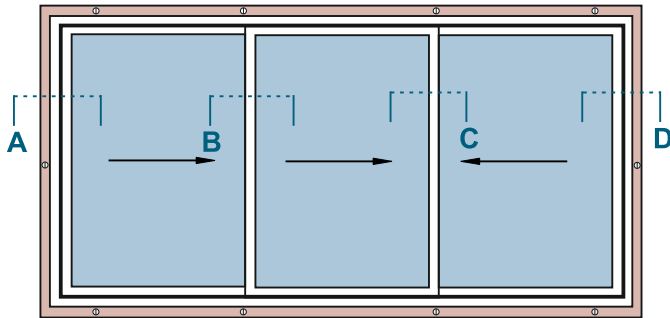


Please follow the instructions below if the middle panel was ordered to slide to the right as shown in the drawing opposite.

Please note all secondary products and images shown here are viewed from the inside.

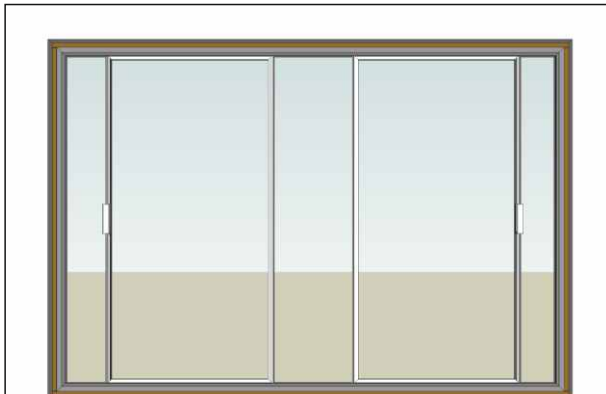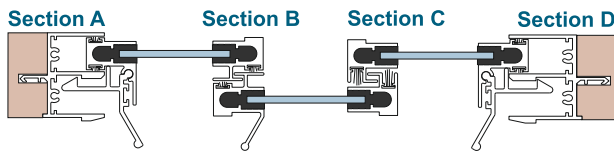


Step 1

Insert the two back panels into the back track. Make sure the black skids go to the base of the product.

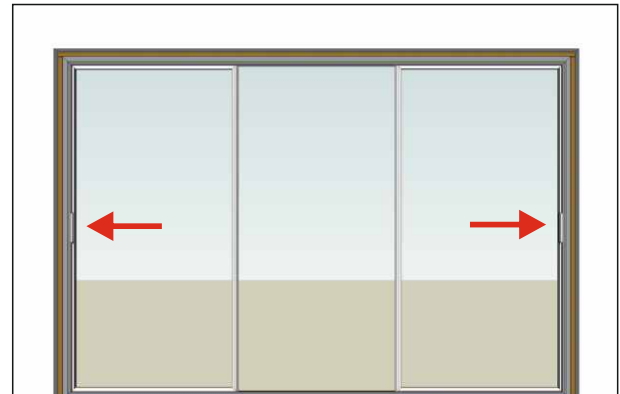

Step 2


Lock each panel into the outer frame. You will hear a click as the handles clip into place.

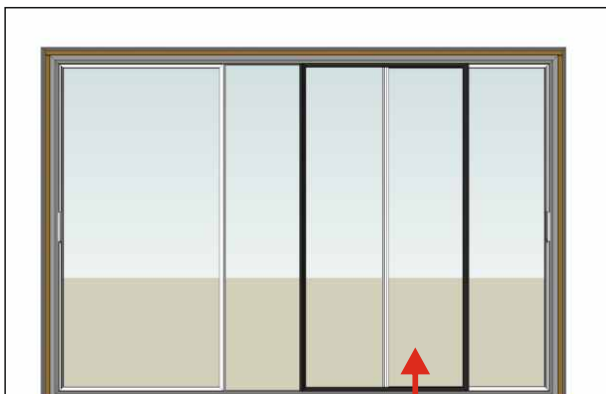

Step 3

Insert the last panel into the front track. Make sure the black skids go to the base of the product.

If your middle panel was designed to slide right this should be inserted over to the right hand side as shown above.

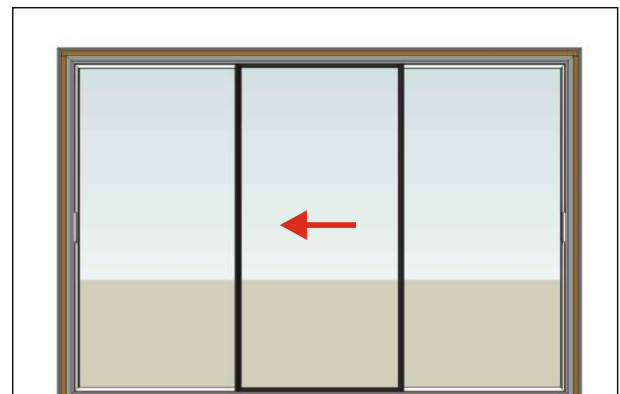

Step 4

Once inserted as shown in step 3 slide the panel to the left. This will engage all the interlocks.

Both the front panel and back panels should line though to create a 20mm sight line.



Duration Windows reserves the right to make changes to the product specification as technical developments dictate, and without prior notice. Pictures shown are for illustrative purposes and are not binding in detail, colour or specification.

Secondary Glazing




DURATION
WINDOWS

Inserting Panels On A 3 Panel Horizontal Slider (All Panels Moving)

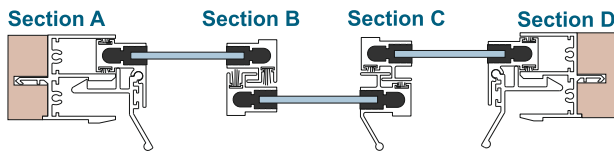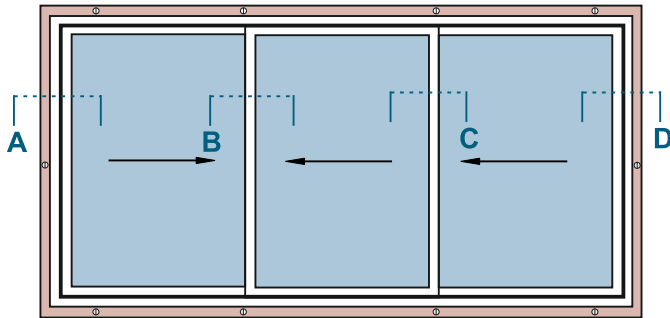


Please follow the instructions below if the middle panel was ordered to slide to the left as shown in the drawing opposite.

Please note all secondary products and images shown here are viewed from the inside.

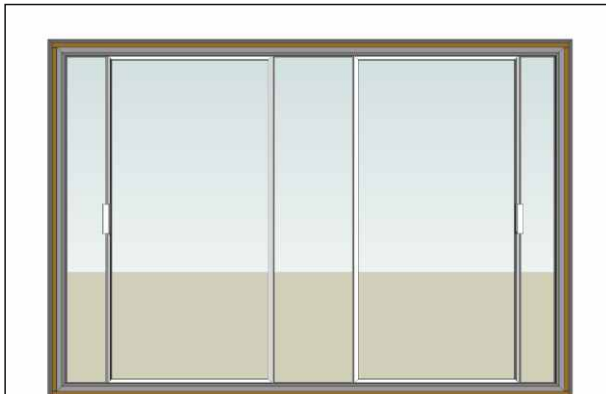


Step 1

Insert the two back panels into the back track. Make sure the black skids go to the base of the product.

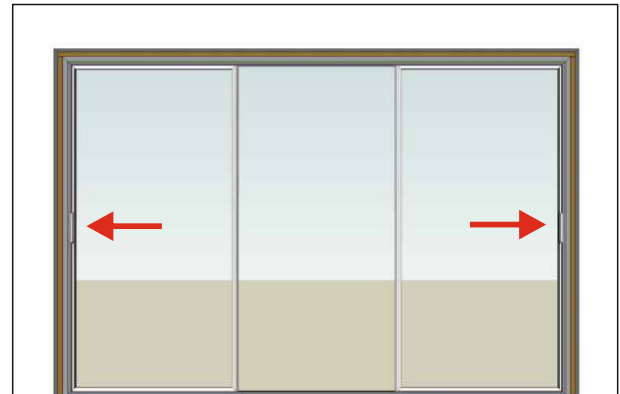

Step 2


Lock each panel into the outer frame. You will hear a click as the handles clip into place.

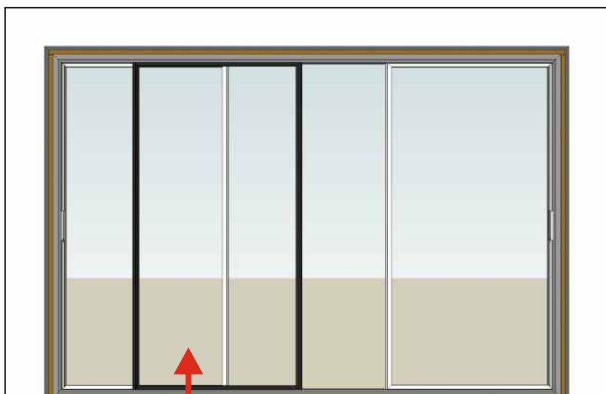

Step 3

Insert the last panel into the front track. Make sure the black skids go to the base of the product.

If your middle panel was designed to slide left this should be inserted over to the left hand side as shown above.

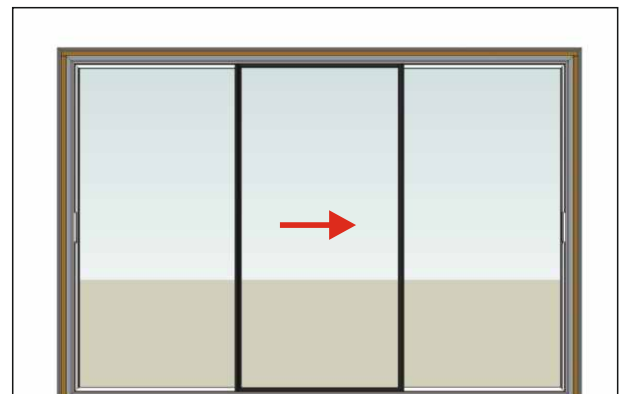

Step 4

Once inserted as shown in step 3 slide the panel to the right. This will engage all the interlocks.

Both the front panel and back panels should line though to create a 20mm sight line.

Duration Windows reserves the right to make changes to the product specification as technical developments dictate, and without prior notice. Pictures shown are for illustrative purposes and are not binding in detail, colour or specification.